



MM005 Sweex 2.4" digital photo frame

Switching on and off is done by pressing the "Power" button for three seconds.

Placing photo's on the Photo Frame

Connect the Photo Frame to a USB port of your computer.

Press the menu button on the rear side of the Photo Frame and choose "USB Connect". Select "Yes" and wait 15 seconds. The software will start automatically.

1. Select the photo's you want to copy in window 1.
2. Click at 2 to add the image
3. The photos are added to the list at 3.
4. To complete copying press the button at 4.

Settings and Operation

With the "Up" and "Down" buttons you can browse through the photo's and navigate in the menu.

Press "Menu" on the rear side to enter the menu and change the settings. To select one of the menu items press menu again. Change the values with the "Up" and "Down" buttons.

Charging the Photo Frame happens by connecting the device to a USB port.